BTR-800TT

All Weather Bluetooth Rock Speakers
Quick Start Guide

1) Verify the Contents

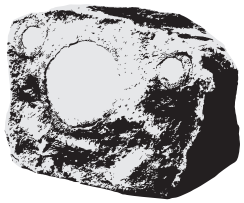

Rock Speaker

100-240V Power Supply for Rock Speaker

2) Plug Rock Speaker into Power Source:

- **A.** Place Rock Speaker near 12 volt AC outlet so the Power Supply can be connected. This will provide electrical current needed for the Internal Amplifier & Bluetooth Receiver.
- **B.** Make sure that the Power Supply Block will **NOT** be sitting in water.
- **C.** The speaker wire can be cut down for an exact fit but should **NOT** be extended beyond 13-feet.
- **D.** Turn power button on. Red LED indicator light will light up when power is on.

Rock Speaker - Bottom View

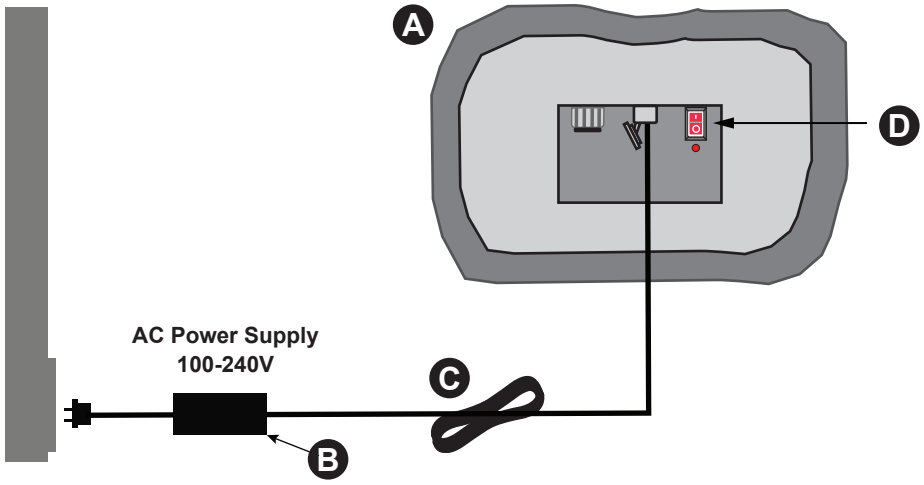

3) Pair Bluetooth Device With BTR-800TT

- **A.** Make sure both your Bluetooth device and the BTR-800TT are turned on and charged up.
- **B.** Find Bluetooth controls. Typically found in the devices' Settings or Connections menu.
- **C.** The BTR-800TT will output a Bluetooth Sync code that will be received by your Bluetooth device. Sync device.
- **D.** Once synced, the controls (such as volume, mute, etc.) will be done directly from your Bluetooth device.

Note: The BTR-800TT can only sync with one device at a time. You must disconnect the current device before syncing to another device.

Bottom View

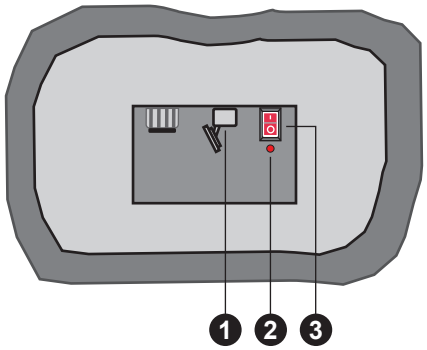

1) DC to AC In
2) Red LED Indicator
3) On/Off Power Button

Ideal for Lawn and Garden Placement

Rock Speaker

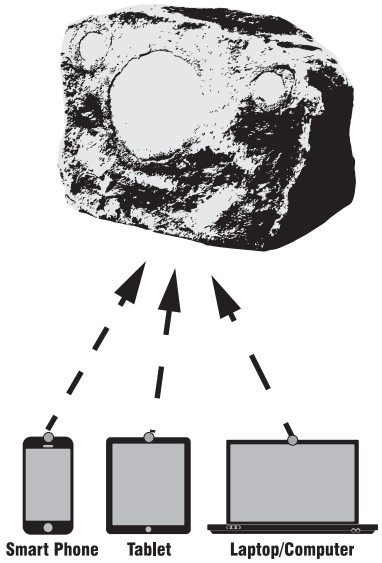

Bluetooth Range May Vary:
Line of Sight
120 to 150 feet (Unobstructed)
50 to 75 feet (Obstructed)

"Wireless" Bluetooth Operation connects to any Bluetooth-enabled device such as smart phones, tablets and laptop/computers.

OSD Audio
775 Columbia St. • Brea, CA 92821
(888) 779-4968• www.osdaudio.com